

Korkeus: 250 mm
Leveys: 95 mm
Syvyys: 23 mm
Paino: 230 g

Mikrokytkin, 1 kpl. NO
IP-Luokka: IP67
Nimellisestä nimellisvirrasta:
12 V Resistiivinen 6A
 Induktiivinen L/R 5 ms 6A
24 V Resistiivinen 6A
 Induktiivinen L/R 5 ms 5A
Pienin nimellisvirta 1mA/4 V DC

 


Materiaali
ABS-muovi



Puhdistus:
Kytöntä voidaan puhdistaa
kaupallisesti saatavilla
olevilla puhdistusaineilla.

Reikäkuva:

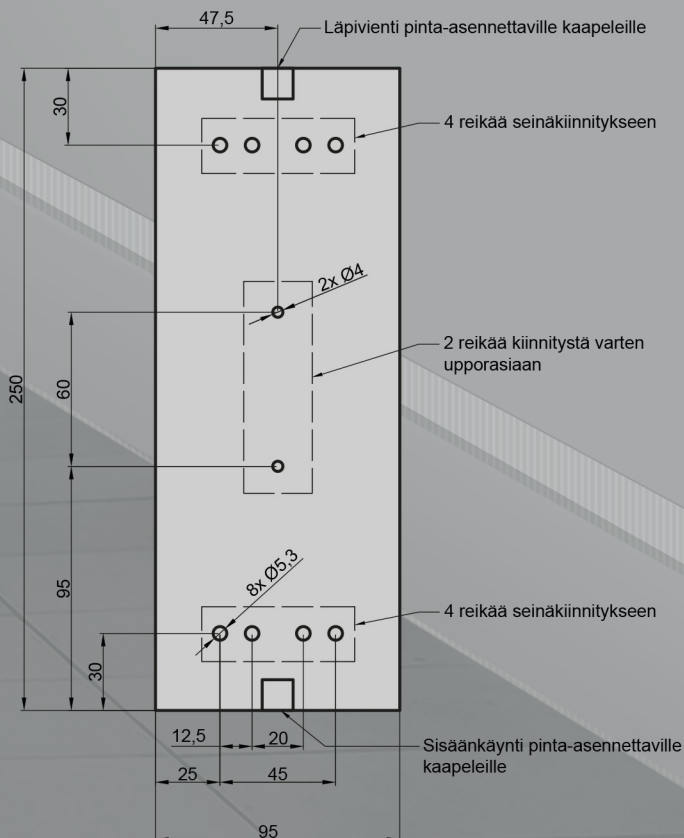

Valinnainen varustus:

Voidaan tilata seuraavilla varusteilla:

- * 2 Mikrokytkin
- * NO/NC Mikrokytkin
- * Radiohallinta
- * Ohjausyksikkö, jossa on 2 lähtöä
- * Yleiset symbolit:

1. Ovisymboli



2. Pyörätuolisymboli



3. Hissymboli

 


Assembly and installation.

1. Press the plastic lid so that the dismantable the holes are visible.
2. By having the lid pressed insert the tip of a flat screwdriver in the dismantable holes and drag upwards.
3. Remove the lid.
4. Remove the cable screws.
5. Connect the electric wiring (12 - 24V) and place back the cable screws.
6. Fixate the plastic core with screws and washers (not included).
7. Assemble the lid by placing the lid mark in the the core spring and pressing on the right side.

For more information click on the following link:

[Video on how to safely remove the lid of a plastic elbow switch.](#)

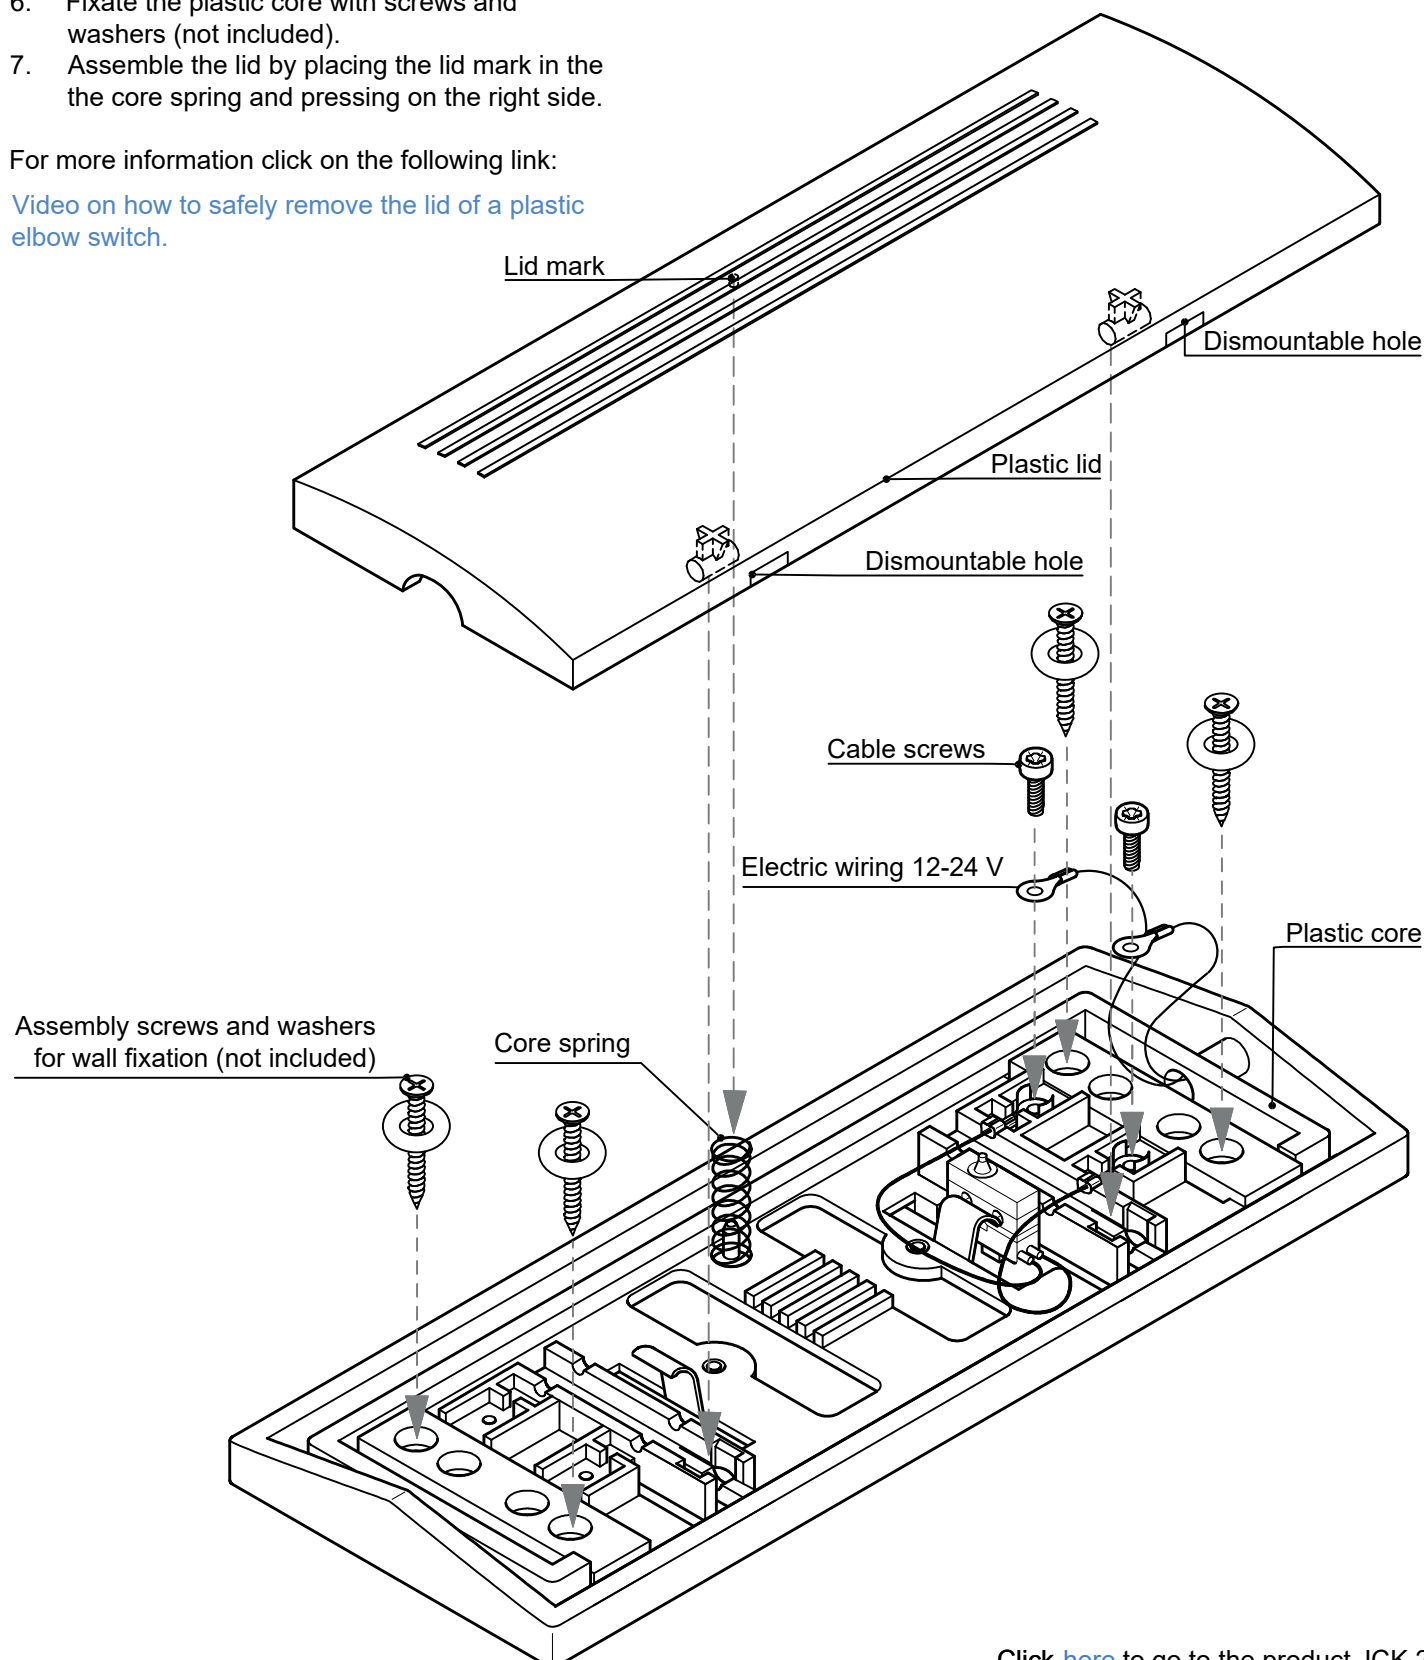

Click [here](#) to go to the product JCK 211.